


BIGTOOLRACK





ASSEMBLY INSTRUCTIONS

**600 LBS MAX
NOT FOR ROAD USE**

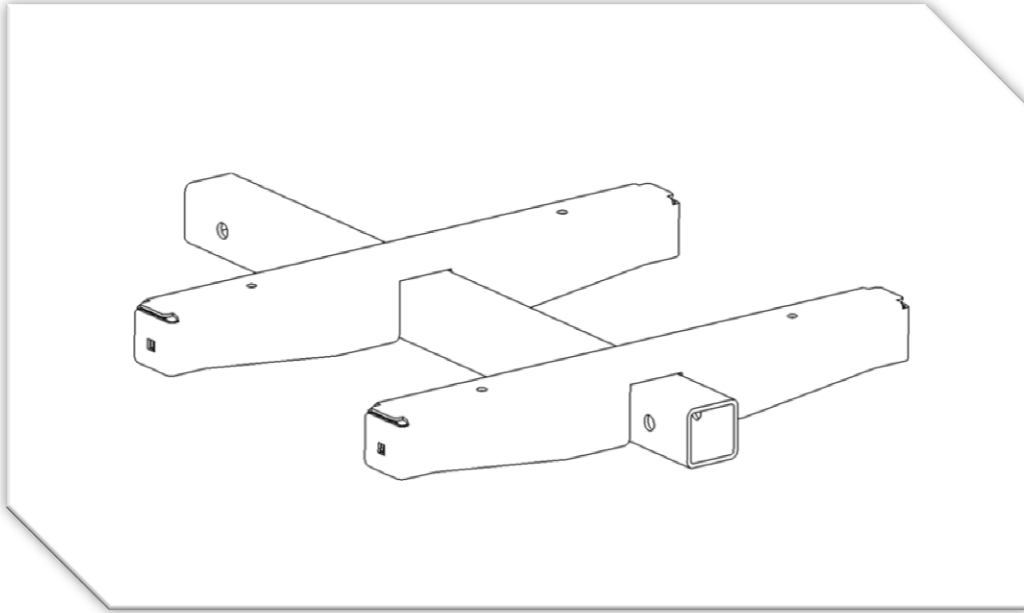

Layout a BTR-A006 on a flat surface that is suitable for assembling.

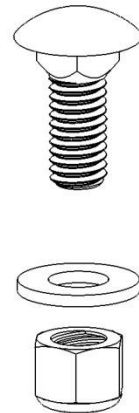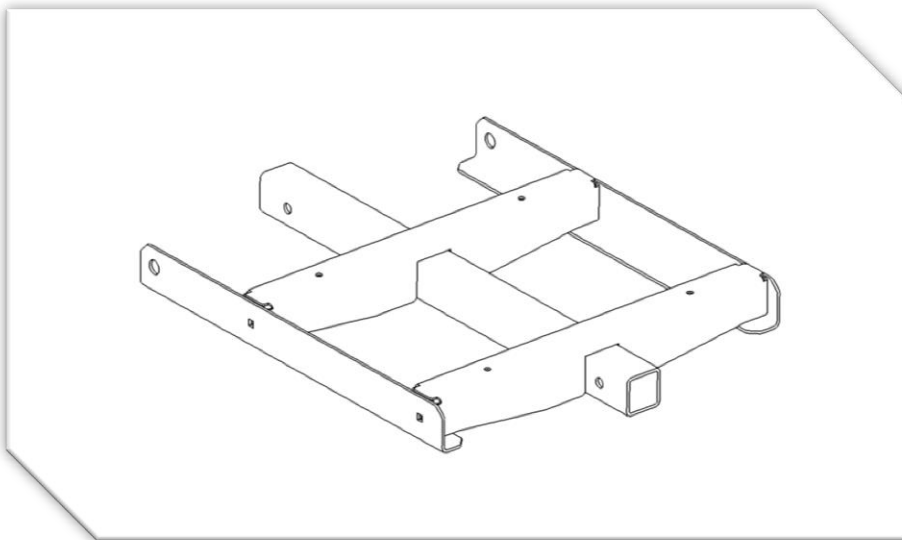




Attach BTR-023 & BTR-024 using:

3/8" x 1" Carriage bolt (1102-09) x4

3/8" washer (1325-15) x4

3/8" locknut (1202-10) x4

7/8" Adjustable Cat 1 Pin (4660-67) x2

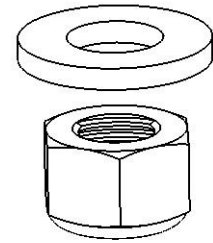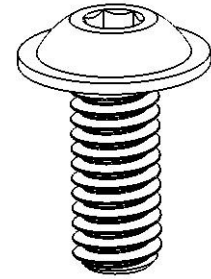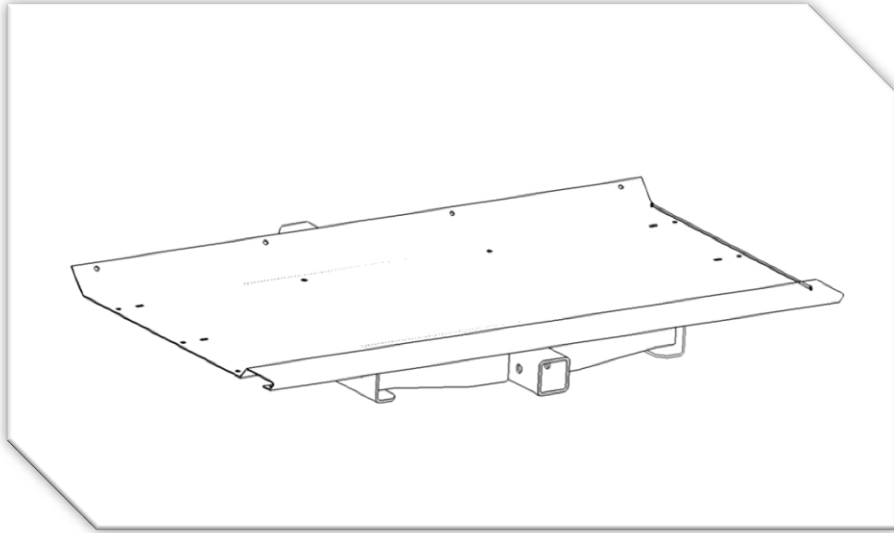




Attach BTR-007:

Place part over top of the frame and fasten with the 4 lined up holes.

5/16" x 3/4" SH Cap Screw (1108-04) x4

5/16" Washer (1325-12) x4

5/16" locknut (1201-05) x4

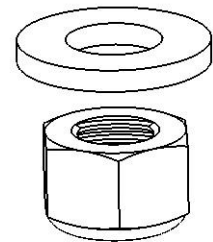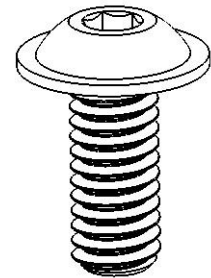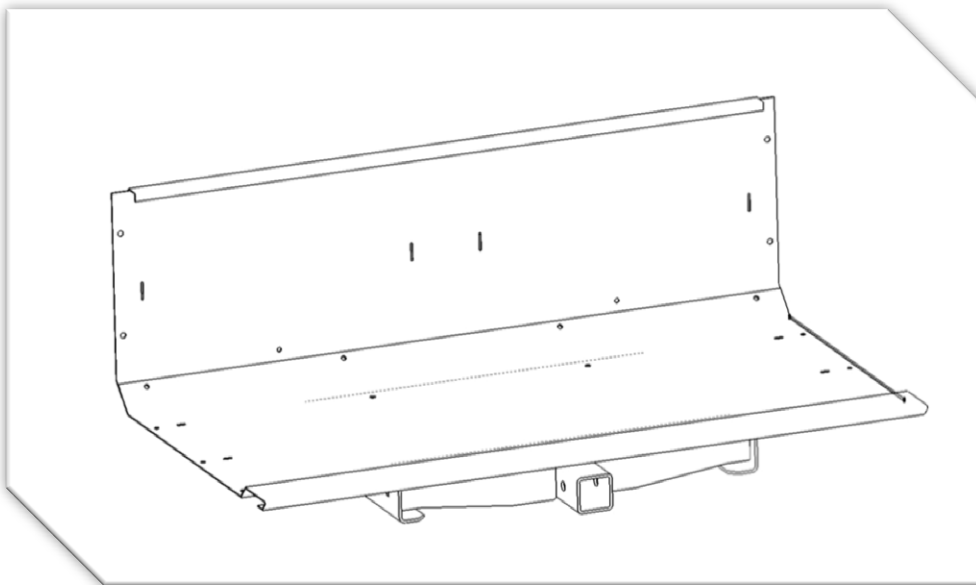


Attach BTR-001 using:

Place part behind the bed and use the four lined up holes to fasten.

5/16" x 3/4" SH Cap Screw (1108-04) x4

5/16" Washer (1325-12) x4

5/16" locknut (1201-05) x4

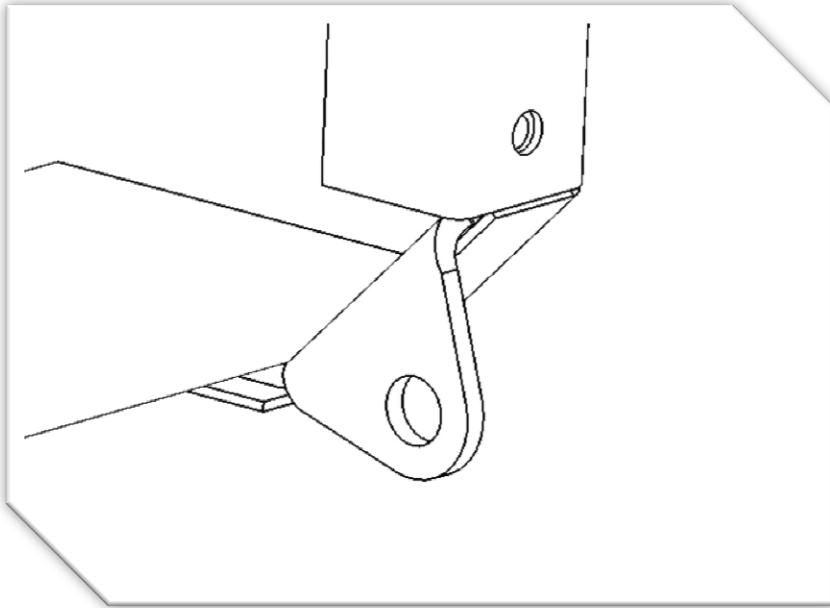

Attach BTR-006s to BTR-A023 and A024:



Place part behind panels and use threaded holes on the part to fasten. You will use the second set of bolts and washer on the next step.


 


- 5/16" x 3/4" Bolt (1002-17) x4
- 5/16" lock washer (1220-10) x4

Attach BTR-A023 and BTR-A024 using:

Assemble each side panel by placing the edge inside the back panel but below the bed.

- 5/16" lock washer (1220-10) x6
- 5/16" Washer (1325-12) x6
- 5/16" x 3/4 SH Cap Screw (1108-04) x6

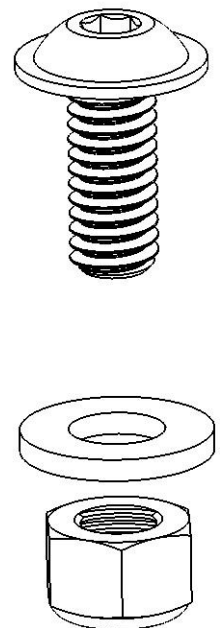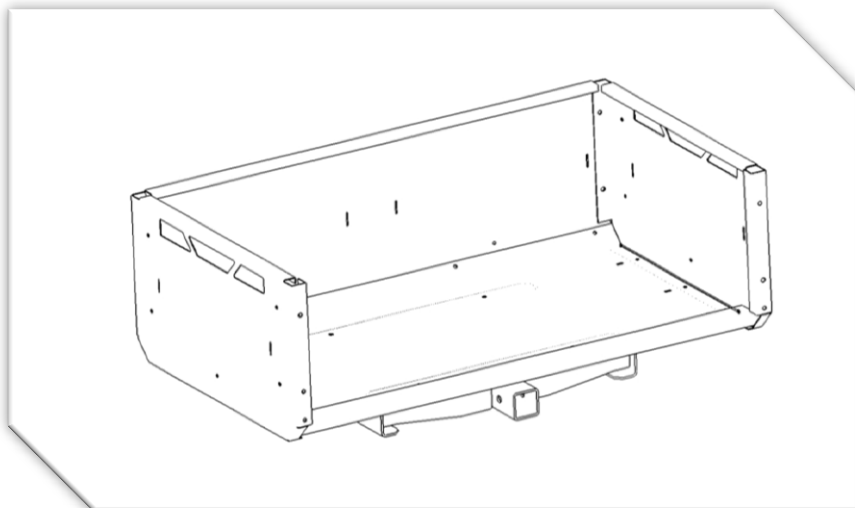


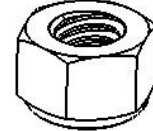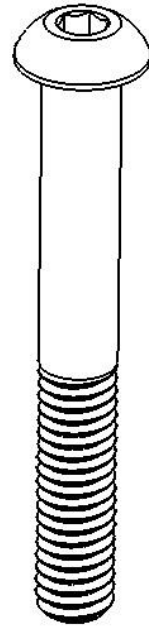
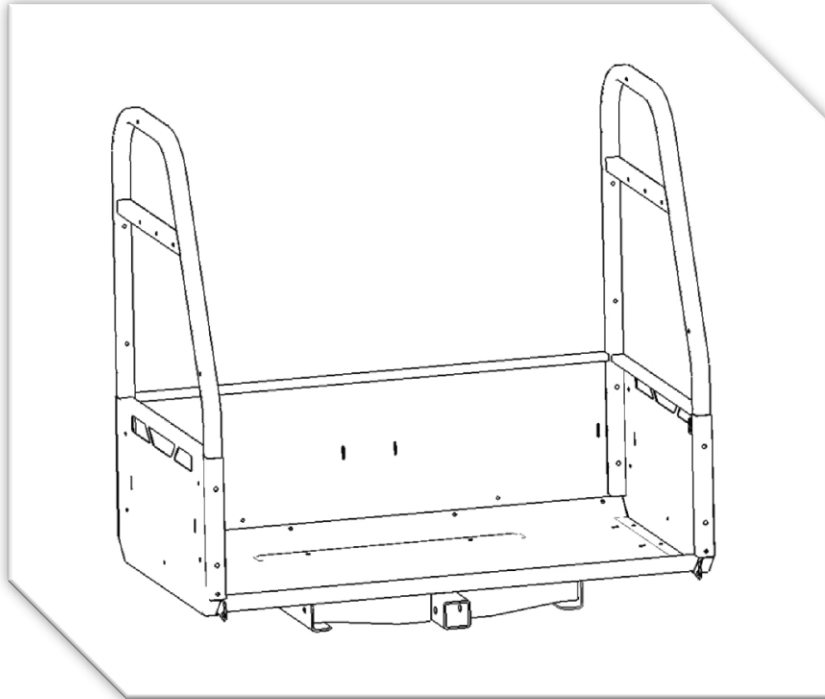


Attach 2x BTR-A028:

Slide the parts through the tops of the side panels and lightly fasten to the assembly. If you have the Deluxe Wheel System refer to the steps on page 12 for installing BTR-051 at this stage.

- 5/16" Washer (1325-12) x8
- 5/16" x 2-1/2" SH Cap Screw (1108-26) x8
- 5/16" locknut (1201-05) x8
- BTR-095 x1
- BTR-098 x1

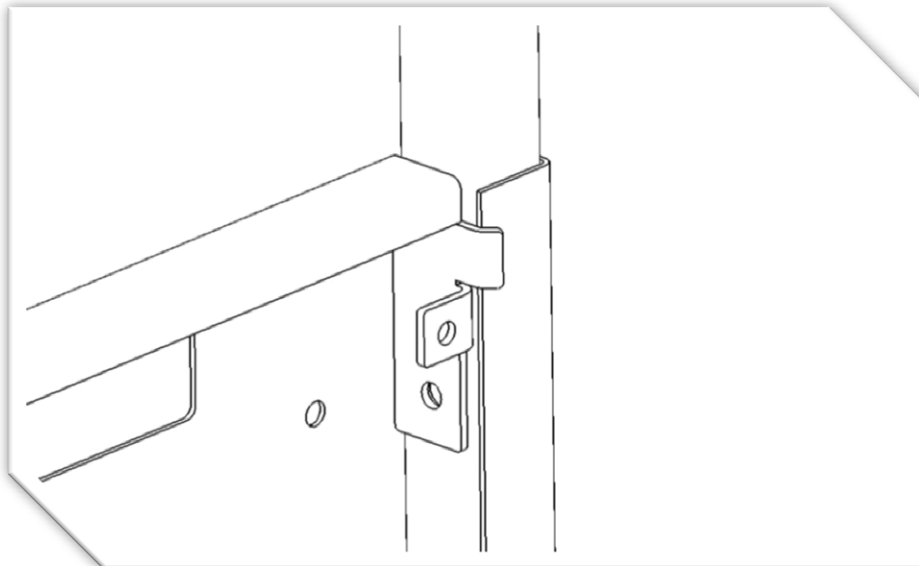

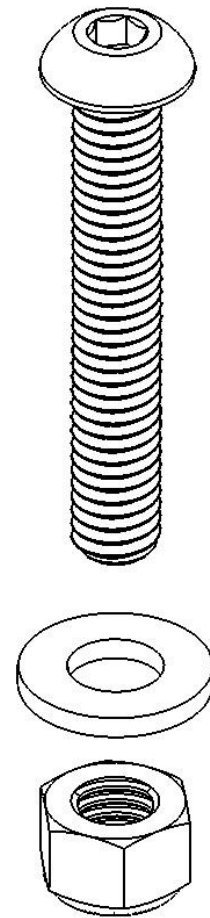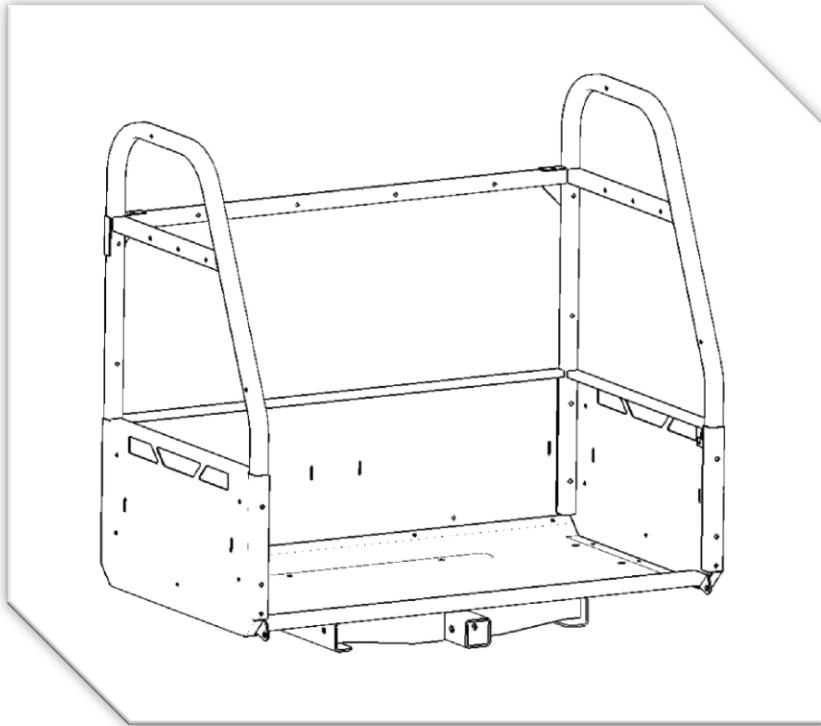

Attach BTR-022, BTR-090, and BTR-091:

Loosely fit the beams parts together and then tighten all the fasteners once the assembly is fitted..

5/16" 2" SH Cap Screw (1108-13) x4

5/16" Washer (1325-12) x4


5/16" locknut (1201-05) x4

Attach BTR-A022

to BTR-A002 using:

5/16" x 3/4" SH Cap Screw (1108-04) x2

5/16" locknut (1201-05) x2


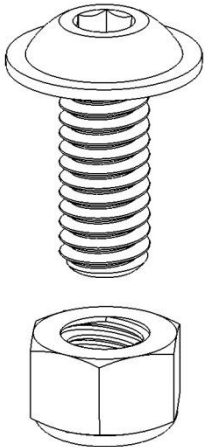


Attach BTR-100

to BTR-A002 using:

5/16" x 3/4" SH Cap Screw (1108-04) x2

5/16" locknut (1201-05) x2

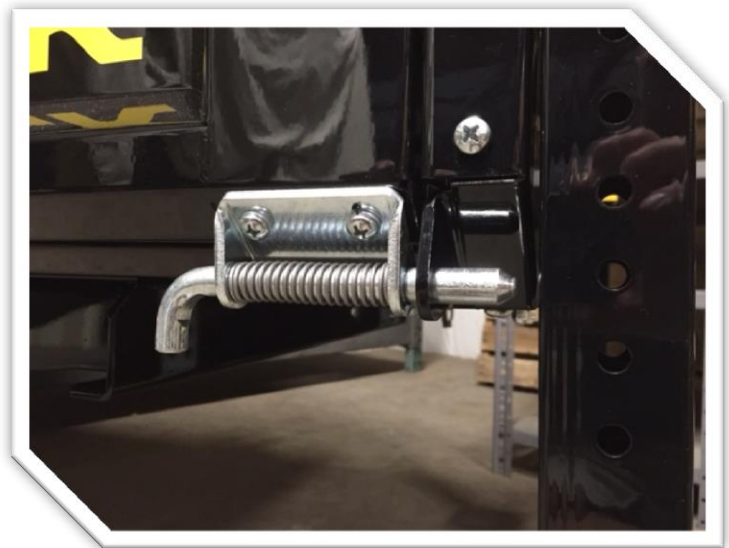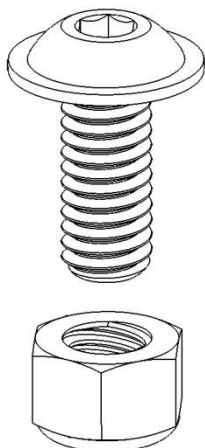




Attach Cables (4340-64) using:

Place part behind panels and use threaded holes on the part to fasten.

$\frac{1}{4}$ " x $\frac{7}{16}$ " Shoulder Screw (1165-14) x2

$\frac{1}{4}$ " locknut (1200-10) x2


$\frac{1}{4}$ " washer (1325-09) x2

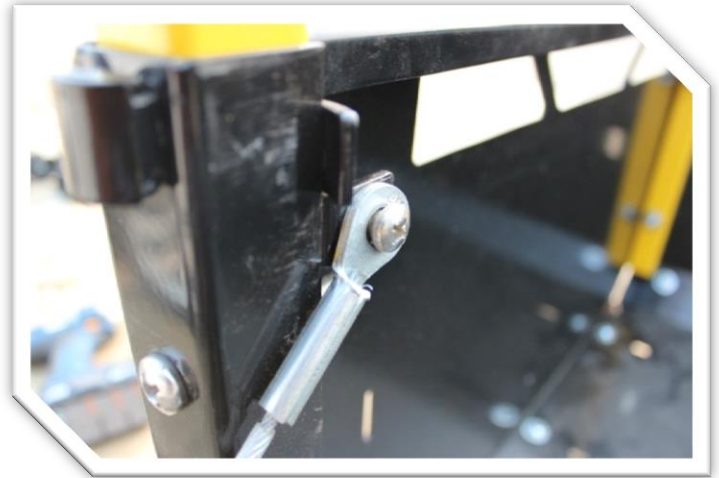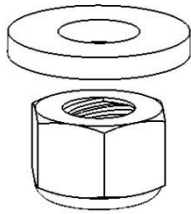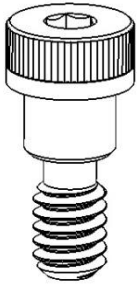


Attach Cables (4340-64) using:

$\frac{5}{16}$ " x $\frac{3}{4}$ " SH Cap Screw (1108-04) x2



$\frac{5}{16}$ " Washer (1325-12) x2

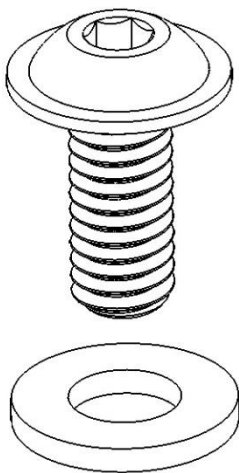

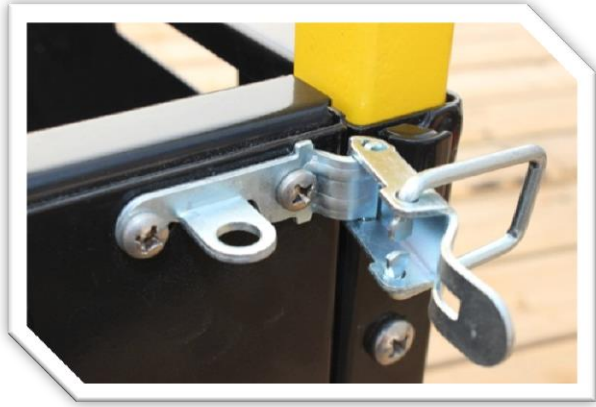

Attach Latches (1400-04) using:

12-24 x 3/4" SH Cap Screw (1108-03) x4
12-24 nut SS (1200-03) x4

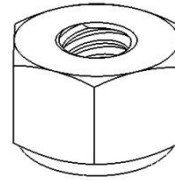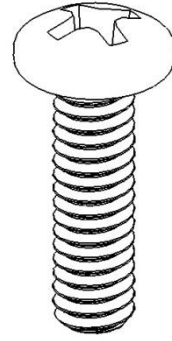

Install 3Point hitch (BTR-A202) using:

5/8" Hitch Pin adjustable (4660-31) x1
5/8" Hitch Pin w/Cotter (1600-77) x1


Options And Pro Kit Add-ons

Attach side bins (2/4) (BTR-031):

1/4"x3/4" Screw (1108-27) x2

1/4" Washer (1325-09) x2

1/4" locknut (1200-30) x2


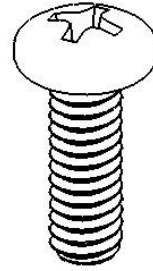


Attach 4 hole Tool Holder (BTR-041) using:

5/16" 2" SH Cap Screw (1108-13) x2

5/16" Washer (1325-12) x2

5/16" locknut (1201-05) x2

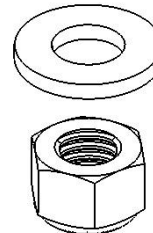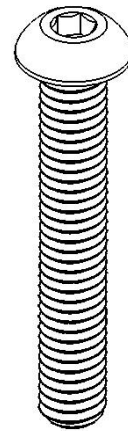

Attach 4 Chain Saw Holder (BTR-042) using:

5/16" 2" SH Cap Screw (1108-13) x2

5/16" Washer (1325-12) x2

5/16" locknut (1201-05) x2



Attach Grass Trimmer Holders(2) using:

BTR Strap tool bracket (BTR-040) x2


BTR Tool bracket mount large (BTR-097) x2

5/16" Bolt Carriage 5-1/2" (1102-14) x2

5/16" Washer (1325-12) x2


5/16" locknut (1201-05) x2

BTR Rubber Strap (BTR-198) x2

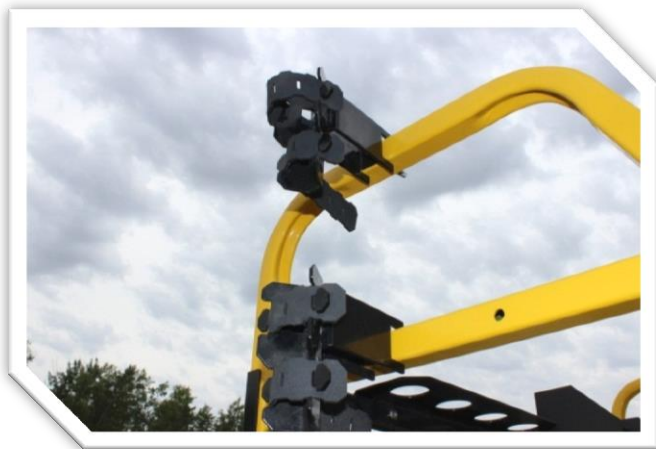

Install Universal Tool Holders(2) using:

- BTR Strap tool bracket (BTR-040) x1
- BTR Tool bracket mount small (BTR-096) x1
- 5/16" Bolt Carriage 3" (1102-17) x1
- 5/16" Washer (1325-12) x1
- 5/16" locknut (1201-05) x1
- BTR Rubber Strap (BTR-198) x1

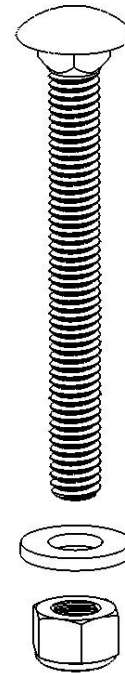


Attach lumber carriers

(BTR-055) using:

Ensure the PTFE washers are placed between the yellow and black painted parts.



- 5/16"x2-1/2" screw (1108-26) x2
- 5/16" Washer (1326-18) x4
- 5/16" PTFE Washer (1326-18) x4
- 5/16" locknut (1201-05) x4

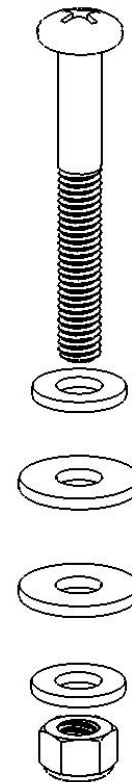

Install BTR-051s(4) using:



- 5/16" Washer (1325-12) x8
- 5/16" x 3/4" SH Cap Screw (1108-04) x8
- 5/16" locknut (1201-05) x8

- Existing* 5/16"x2-1/2" Screw (1108-26) x8
- Existing* 5/16" locknut (1201-05) x8
- Existing* 5/16" Washer (1325-12) x8

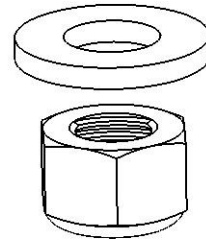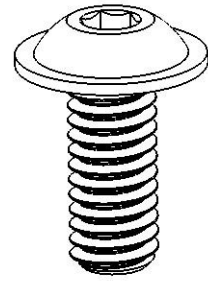

Install Castors(BTR-199) on Legs (BTR-A019)(4) using:

- 3/8"x 1 bolt carriage (1102-09) x16
- 3/8" Washer (1325-15) x16
- 3/8" locknut (1202-05) x16

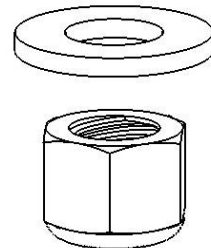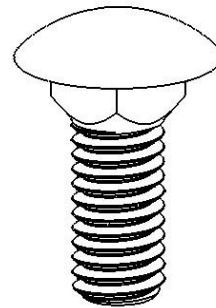


Pin Deluxe Wheel kit onto BTR using:


1/4" x 2-1/2 Quick Pin (1600-01) x4




Part Identification

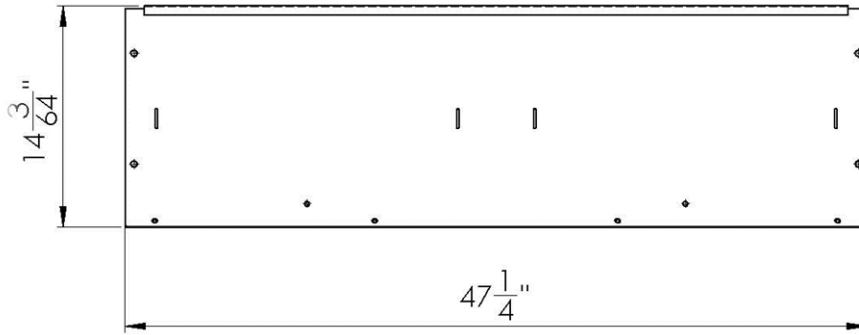


BTR-001

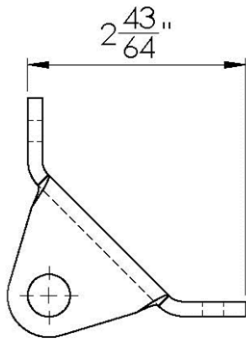


BTR-006

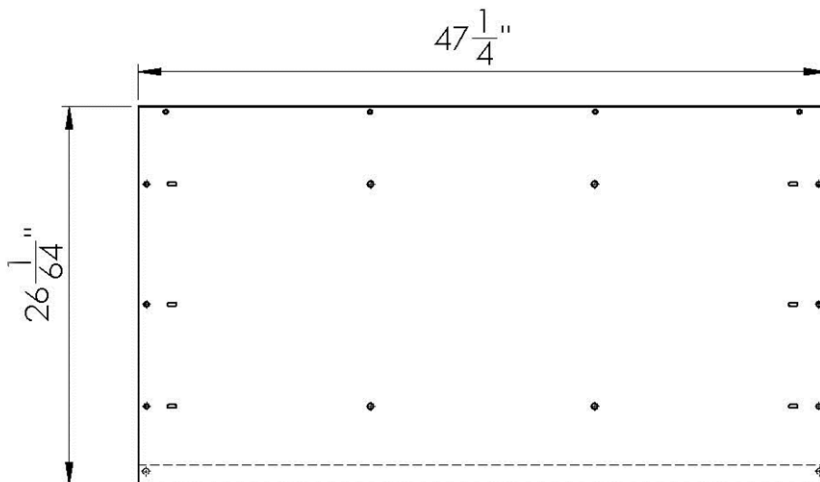


BTR-007

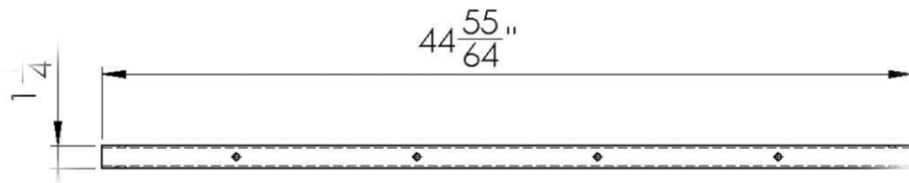


BTR-022

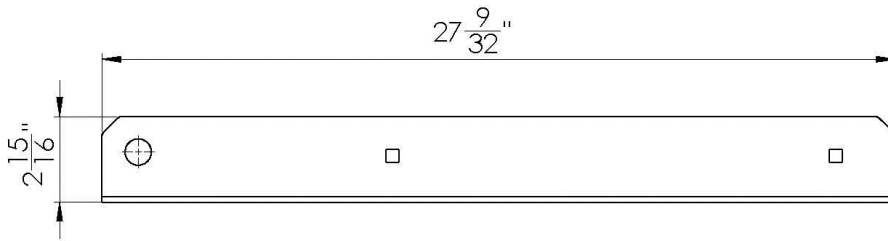


BTR-023

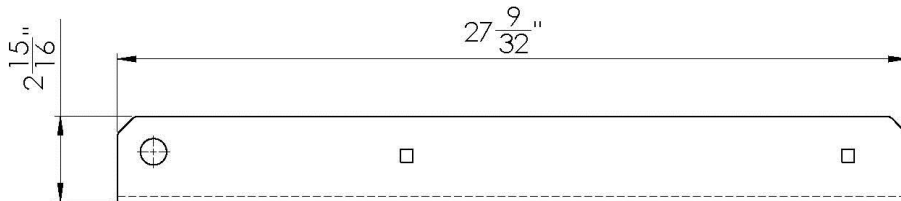


BTR-024

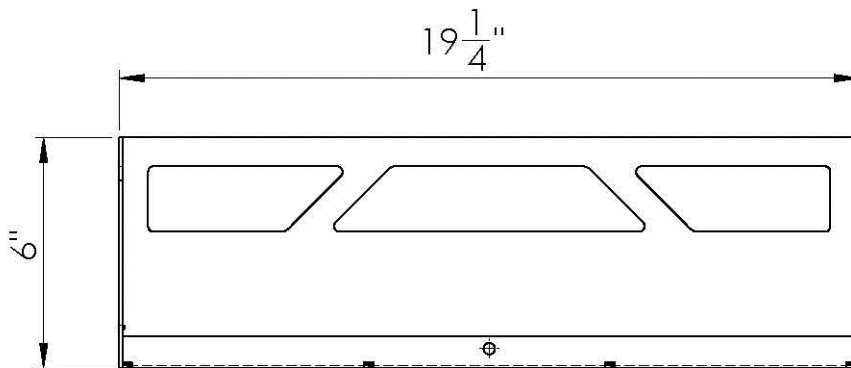


BTR-031

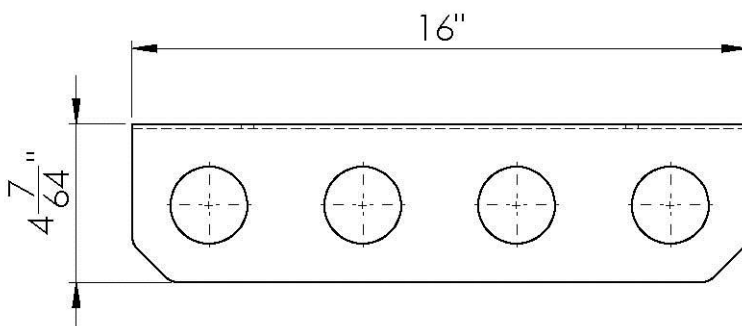


BTR-041

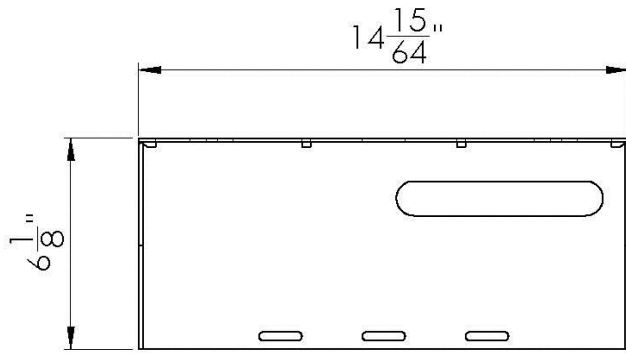


BTR-042

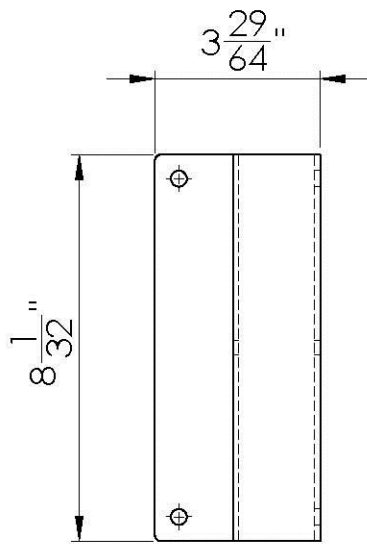


BTR-051

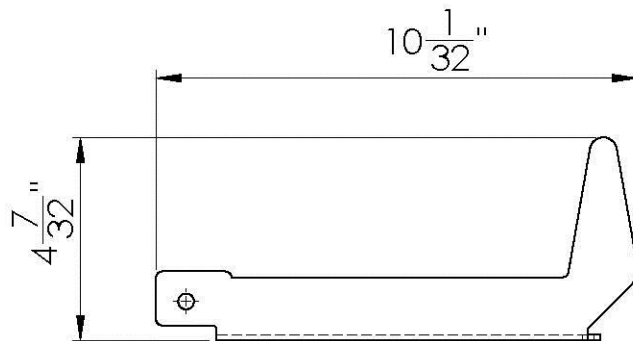


BTR-055

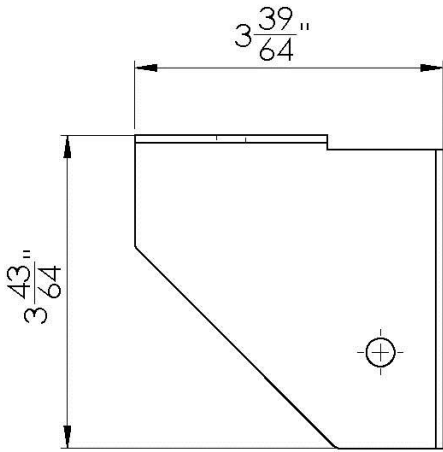


BTR-090

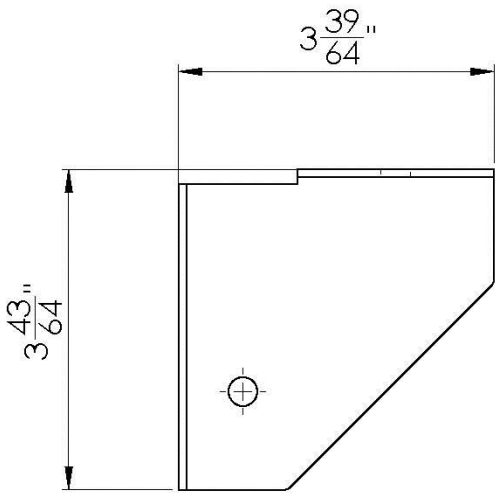


BTR-091

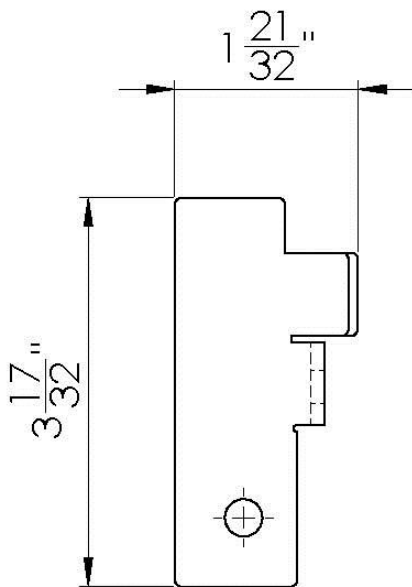


BTR-095

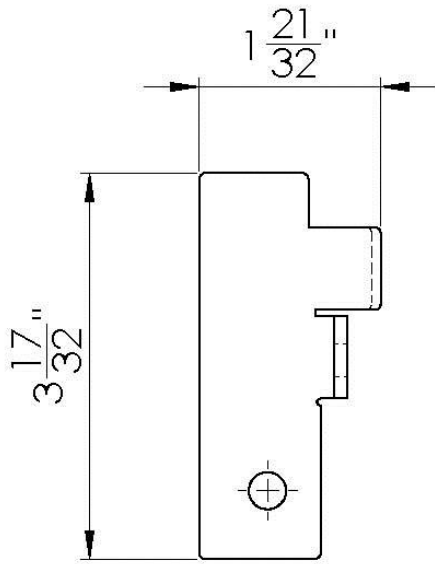


BTR-098

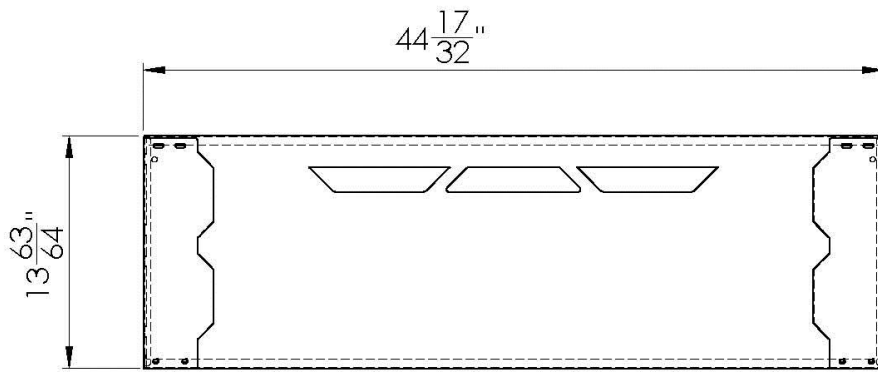


BTR-A002

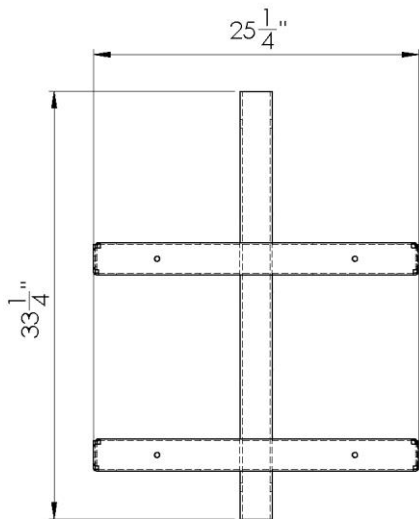


BTR-A006

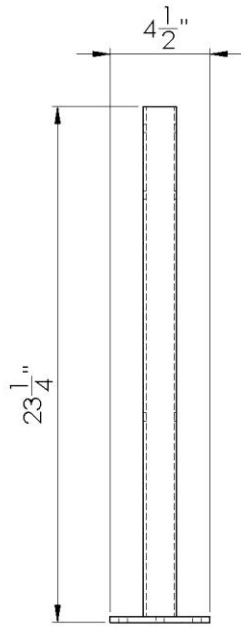


BTR-A019

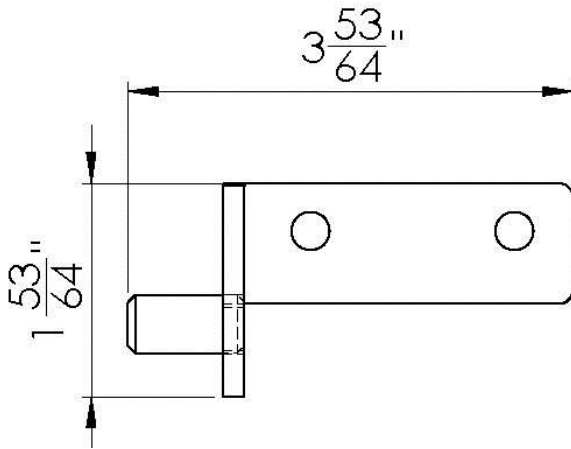


BTR-A022

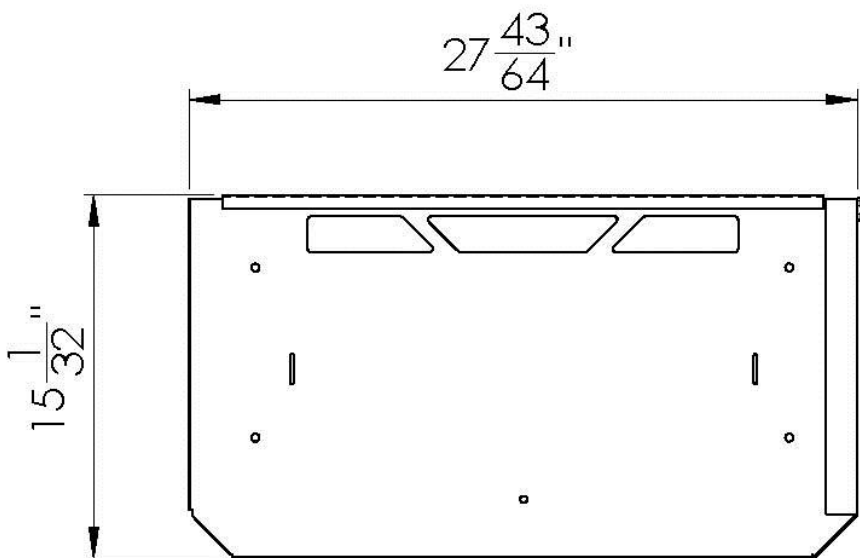


BTR-A023

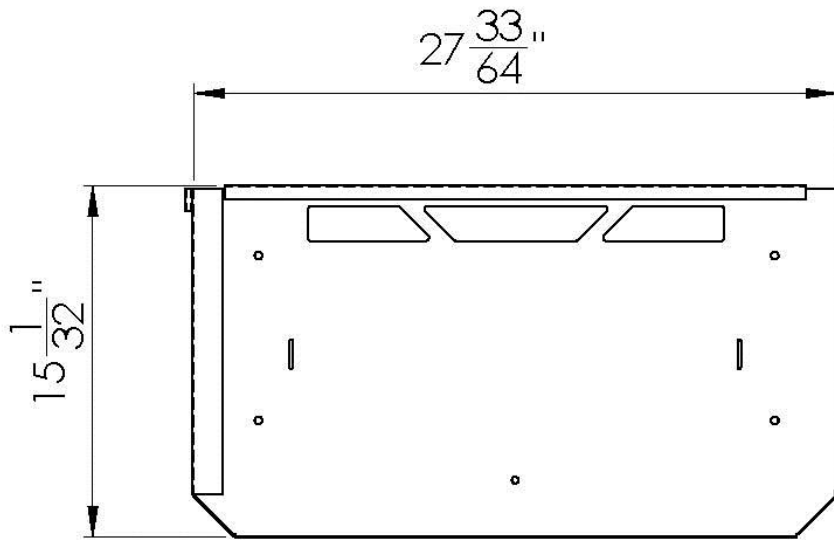


BTR-A024

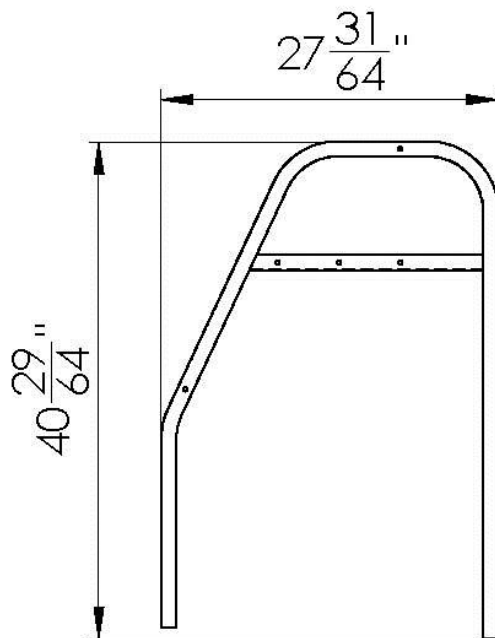

BTR-A028

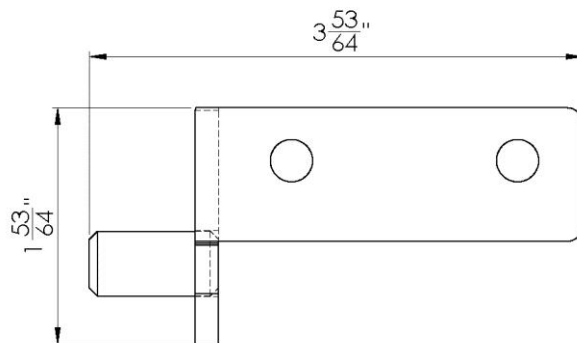

BTR-A029

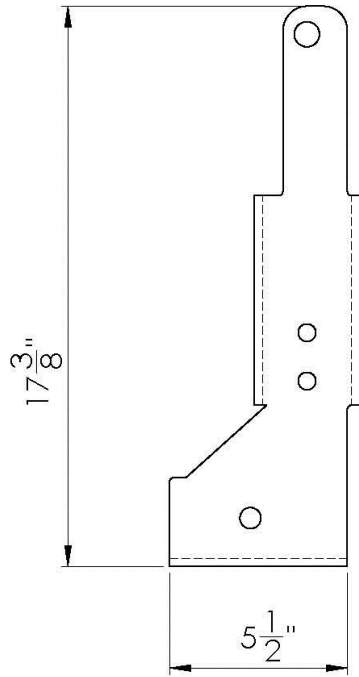

BTR-A202

