CROP DIVIDER

INSTALLATION MANUAL

AGRIFAC CONDORE ENDURANCE II

FREEFORM PLASTICS

BOX 159, ST. BRIEUX, SK CANADA SOK 3V0

P: 1-306-275-2155 F: 1-306-275-2101

EMAIL: SALES@FREEFORMPLASTICS.COM WEB SITE: WWW.FREEFORMPLASTICS.COM

Page | 1 26008-61

NOTES

- LOCTITE ALL FASTENERS THAT ARE NOT SELF LOCKING

TOOLS REQUIRED

- RED LOCTITE
- SNAP RING PLIERS
- 9/16" WRENCH AND SOCKET
- 1/2" WRENCH AND SOCKET

INSTALLATION INSTRUCTIONS

- 1. REMOVE CURRENT STAIR CASE
- UNHOOK THE ACTUATOR FROM THE STAIR ASSEMBLY. THIS WILL ENSURE THERE IS SOME PLAY WHILE HOOKING UP THE LADDER.
- USING SNAP RING PLIERS, REMOVE THE FOUR SNAP RINGS ON THE LADDER.



Page | 2 26008-61

- 2. INSTALL MODIFICATIONS
- ONCE THE LADDER IS REMOVED, BOLT THE REPLACEMENT STEP, 26008-61-01, IN PLACE OF THE TOP TREAD. INSTALL USING EXISTING FASTENERS.
- INSTALL 26008-61-02 AND 26008-61-03 TO THE EXISTING MOUNT LOCATIONS. ENSURE PLATES START NARROW AND GET WIDER AS YOU MOVE AWAY FROM THE SPRAYER. USE THE FOLLOWING FASTENERS:


1325-39 WSHR 3\4 SAE PLD QTY 8
2000-06 SNAP RING 3/4" EXTERNAL QTY 8
26008-61-04 20MM X 34MM SS PIN QTY 4

- PIN THE LADDER INTO WELDMENTS 26008-61-02 AND 26008-61-03 AND RESECURE USING THE EXISTING SNAP RINGS.
- RECONNECT THE ACTUATOR FASTENERS.



3. TIGHTEN ALL BOLTS.

Page | 3 26008-61

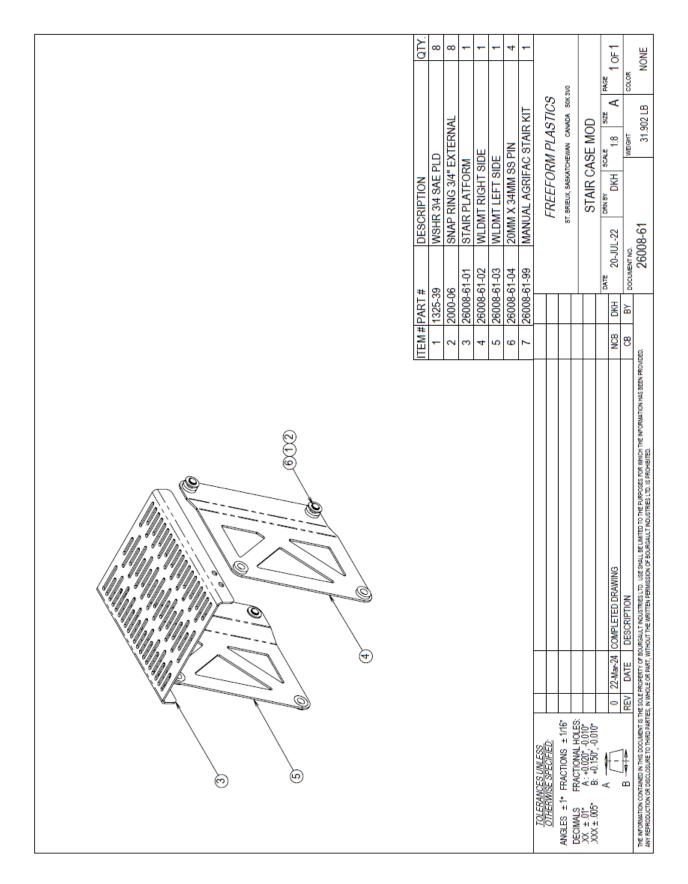

Page | 4 26008-61