



Installation Instructions for the New Holland HW325

Electrical Connection

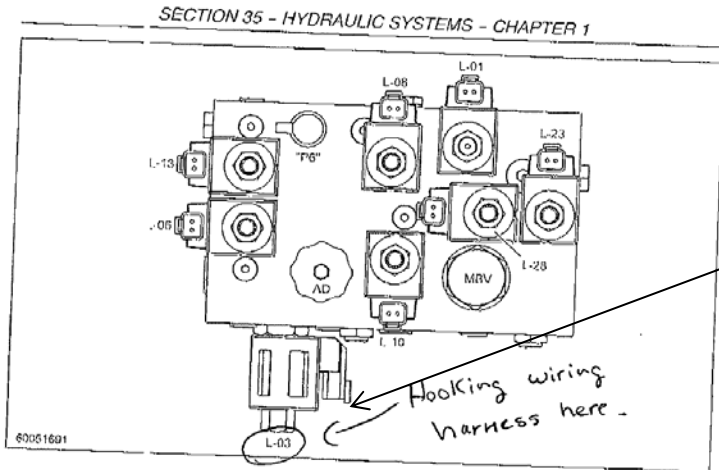


Install the orange electrical wire (#2703) here on the "L-03" solenoid and reconnect the factory wire to this harness.

Return Line Connection

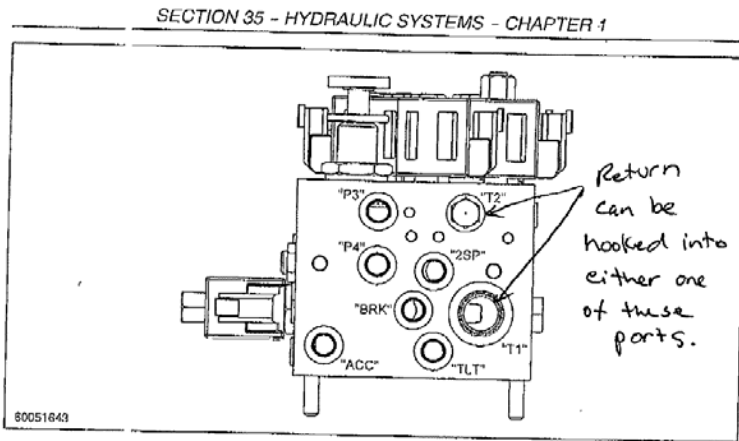

Connect the return line from the valve to either of these locations. "T1" or "T2"

Pressure Line Connection

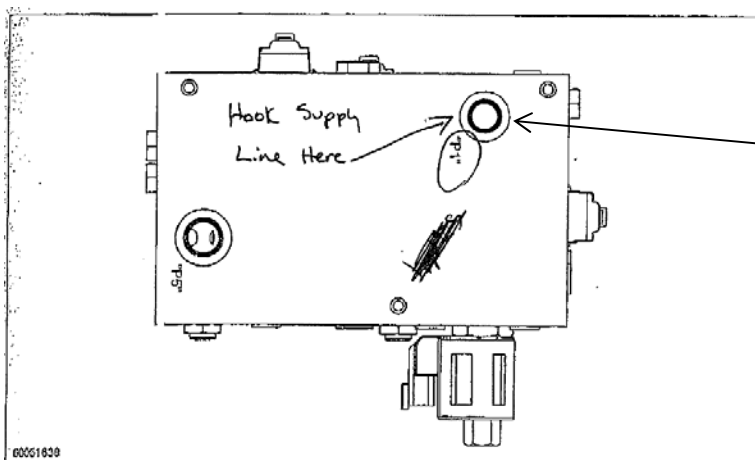

Connect the pressure line from the valve to the "P1" port.